


Garvosa Wildlife

Trap Camera – Setup Guide

1. Motion Detection Setup

Go to Settings → Motion Detection


- Detection Sensitivity: Level 5
- Day and Night Optimization: OFF
- Detection Types: Human, Vehicle, All Other Motions (all ON)
- AI Tracking: OFF

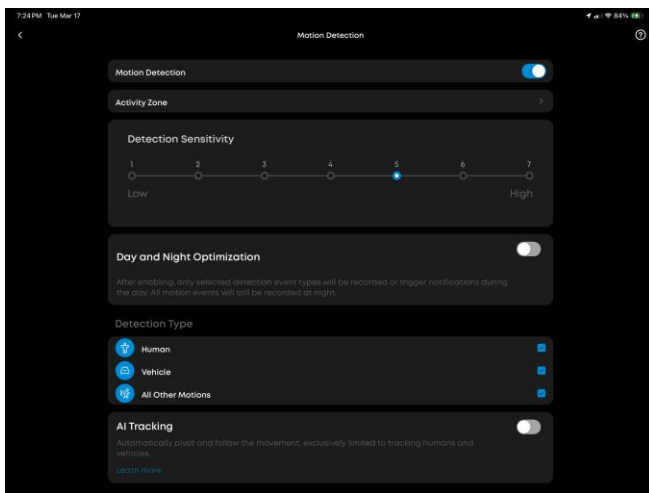

2. Recording Settings

Go to Power Manager → Customized Recording → Edit


- Clip Length: 20 seconds
- Trigger Interval: 45 seconds
- End clip early if motion stops: ON

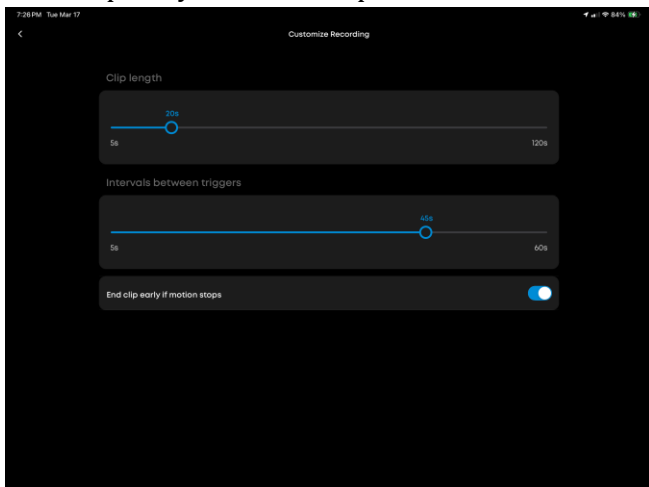

3. Video Settings

Go to Video Settings → Watermark

- Set to Timestamp Only

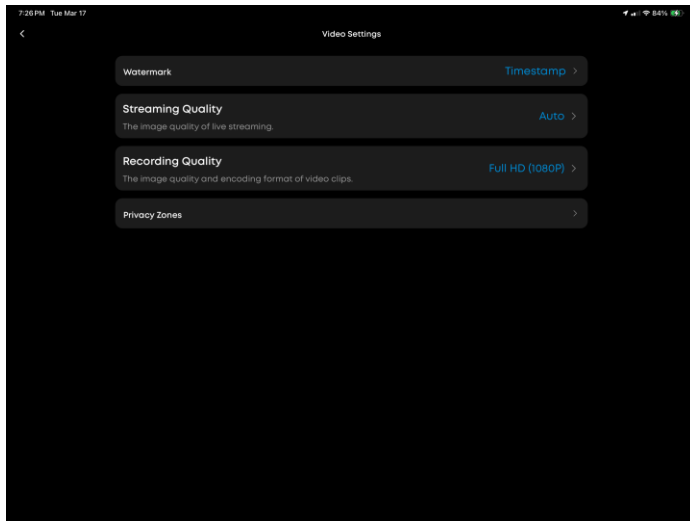


4. Audio Settings

Set audio level to HIGH.

WARNING: Do NOT adjust audio while trap gates are connected.

5. Notifications


Enable Include Thumbnail and optionally set custom alert tone. Each Camera\Trap Controller can have its own Alert Sound set in the APP Alert Tones Dropdown.

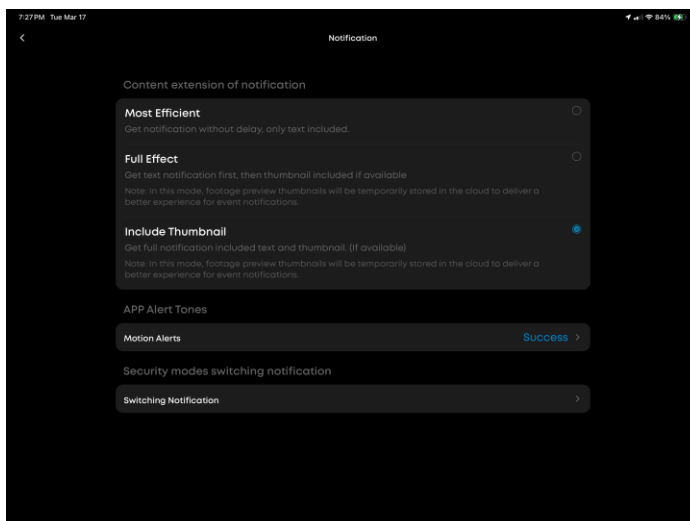

6. Pan & Tilt Setup


Go to Pan & Tilt → Preset Positions.

Use keypad to aim camera, press Set, then Set as Default Position.

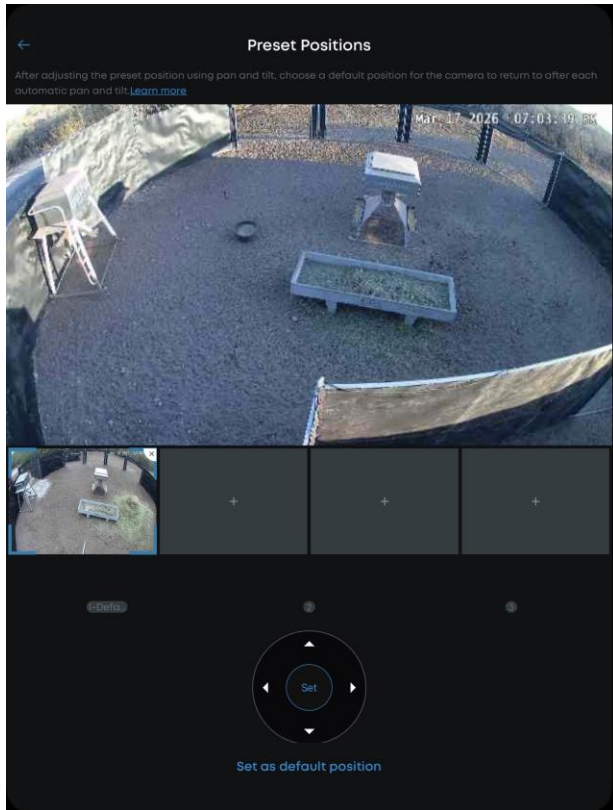

7. Antenna Setup

If Using an LTE\Cellular Connection you will need to connect the External Antenna Coax and enable in the External Antenna in the Settings.

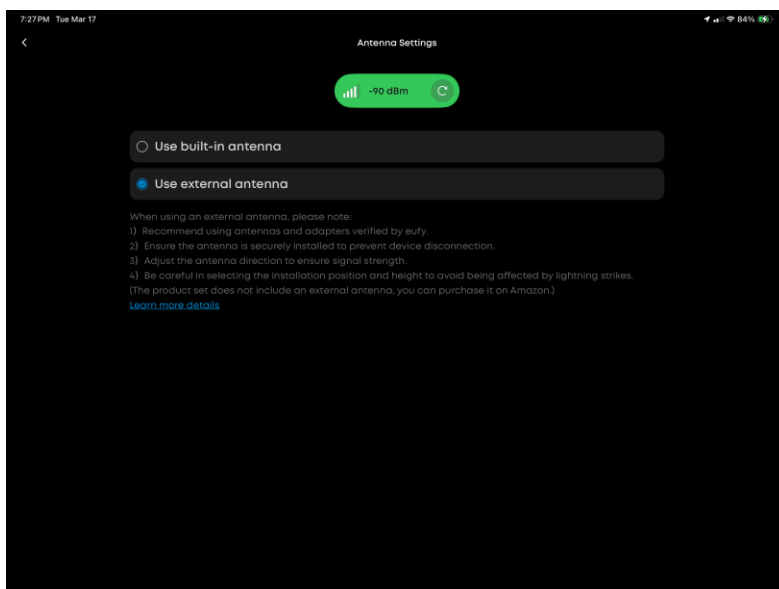


8. Smart Mode / Alarm Settings (Important)

After successfully adding the camera or trap controller to the app, verify the Smart Mode alarm settings.

There have been a few occasions where cameras/controllers were accidentally placed into Away Mode, which can trigger the alarm system and cause a false trap gate drop.

Recommended Setup

- From the main screen of the app, tap the Smart icon.
- Select the desired Camera / Trap Controller.
- Tap the Gear Icon next to Away mode.
- Under Away mode settings, make sure Camera Alarm is OFF (Unchecked).
- Repeat this process for all trap controllers and cameras.

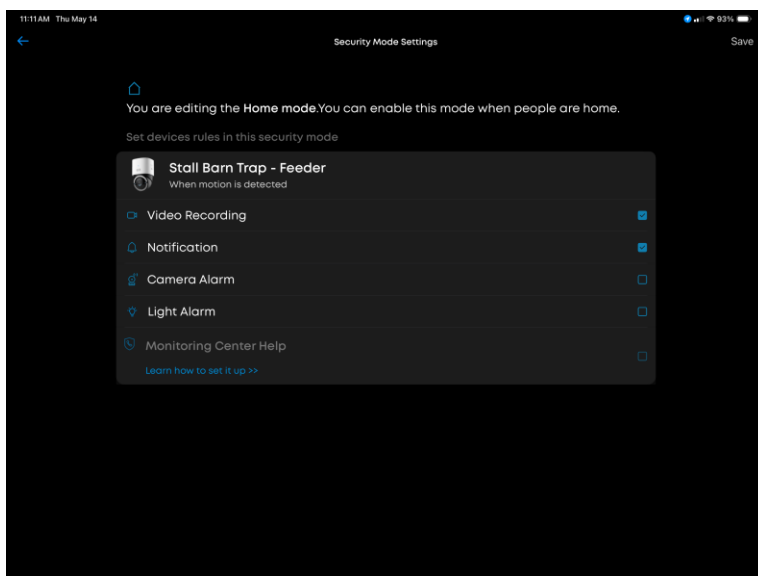

Recommended Operating Mode

Leave the cameras/controllers in Home Mode.

ENABLED (Checked):

- Video Recording
- Notifications

DISABLED (Unchecked):

- Camera Alarm
- Light Alarm
- Monitoring Center Help